



VERIFY THE TEMPLATE PRINTS ACCURATELY TO FULL-SIZE: CHECK BOTH SCALES WITH RULER. MAKE SURE PRINTER IS SET FOR 100%.

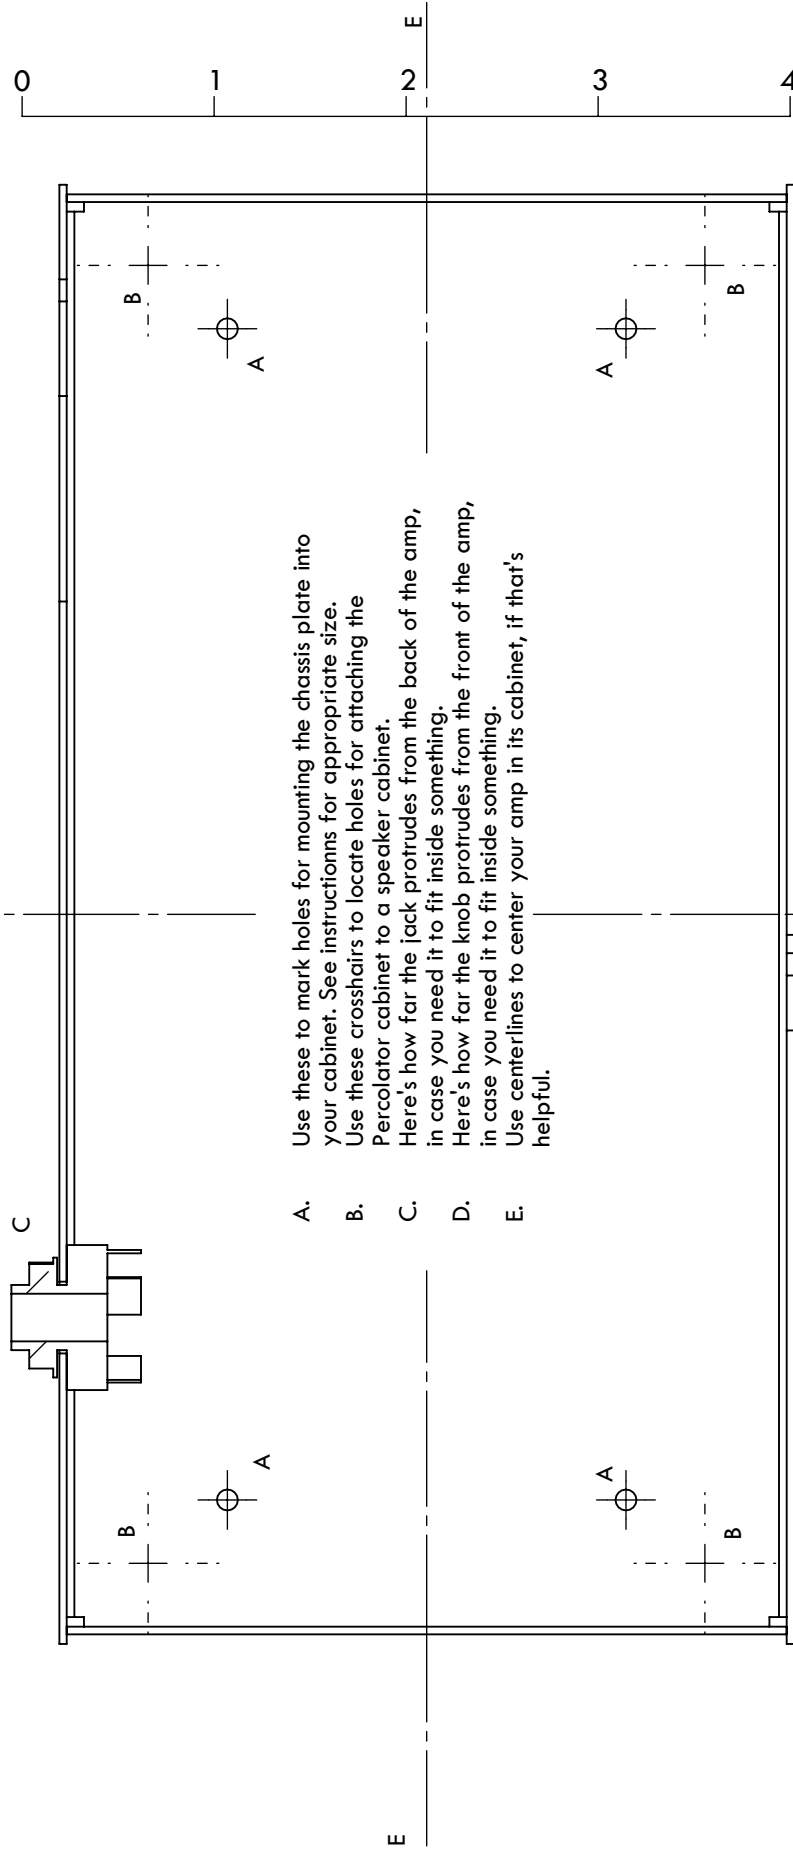

- A. Use these to mark holes for mounting the chassis plate into your cabinet. See instructions for appropriate size.
- B. Use these crosshairs to locate holes for attaching the Percolator cabinet to a speaker cabinet.
- C. Here's how far the jack protrudes from the back of the amp, in case you need it to fit inside something.
- D. Here's how far the knob protrudes from the front of the amp, in case you need it to fit inside something.
- E. Use centerlines to center your amp in its cabinet, if that's helpful.



ZEPPELIN DESIGN LABS, LLC
 2950 N WESTERN AVE CHICAGO IL 60618
 WWW.ZEPPELINDESIGNLABS.COM

**PERCOLATOR 2W AMP - FULL SIZE DRILLING
 TEMPLATE - CHASSIS MOUNT PLATE**

REV. DATE 3/17/2015

PAGE 3 of 3